Introducing Microsoft Windows Mobile

There are two different versions of Windows Mobile: Standard (commonly called Smartphone) and Professional (commonly called Pocket PC)


This reference is applicable to Windows Mobile 6.1, 6 and 5.0

Today Screen / Home Screen





Navigation

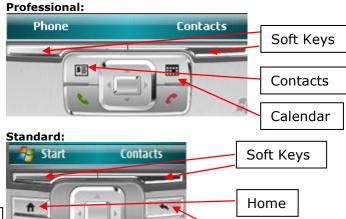

Two Soft Keys - Selections displayed above keys

Home key – *Standard*: Home Screen **Back key** – *Standard*: Go Back one level

Up / Down / Left / Right navigation –Directional Pad or keyboard arrows, *Professional*: via the touch screen **Green phone** - Dialing screen, dials the phone number

Back

Red Phone - End call

Click and hold – *Professional*: press the stylus to the screen

to display the right click menu

 \mathbf{OK} / \mathbf{X} – *Professional*: Hide the window, application runs in background

Customizing

Home screen – Choose what options are displayed *Professional*: Start – Settings – Today - Items *Standard*: Start – Settings – Home Screen

Color Scheme – Choose other color schemes *Professional*: Start – Settings – Today

Standard: Start - Settings - Home Screen - Color Scheme

Buttons – Choose what applications are launched for selected buttons

Professional: Start - Settings - Buttons

Profiles – Normal, Silent, Vibrate, Outdoor, Automatic

Standard: Start - Settings - Profiles

Support

Carriers and OEMs offer technical support for Windows Mobile and ActiveSync. Some charge for support after the first 90 days.

Microsoft Support:

https://forums.microsoft.com/windowsmobile/